

## Shower Wall System


---

### Single Wall Panels - Modern Subway Tile

Model	A	B
3696-MS	96"	36"
3496-MS	96"	34"
4296-MS	96"	42"
5096-MS	96"	50"
6296-MS	96"	62"

MS = Modern Subway Tile Pattern

Wall Panels come with a single wall panel.  
Corner moldings and soap dishes sold separately.

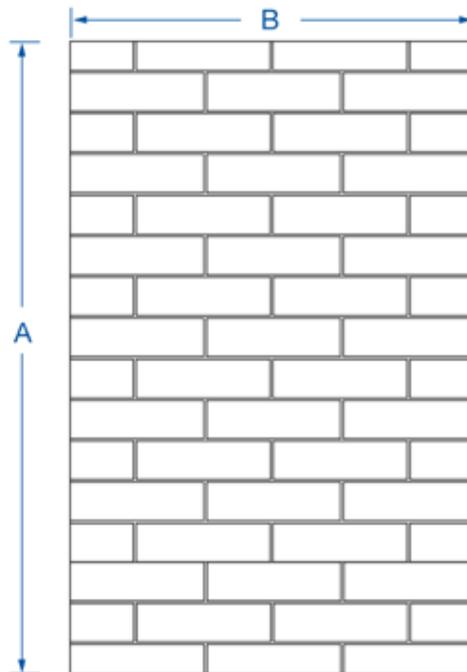

### Product Information

---

The Florestone Modern Subway Wall Panel is shipped in one carton containing one side or back wall panel. Unit to be manufactured of Florestone Solid Surface. Before beginning installation, check for damage. Report damage to your supplier. **DO NOT INSTALL A DAMAGED UNIT.**

**IMPORTANT:** Sealant must be applied to the seam where the walls meet the tub and where the Side Walls and Back Wall interlock to avoid water damage.

Do not use abrasive or acid based materials on wall surface.

(Not available in the N.CA & N.NV market.)